

FASTEN AT BOTH ENDS
WITH MIN. 4 TAPPING
SCREWS.

CUT HORIZONTAL
FASTENER FROM
STUD

VERTICAL WALL STUDS
AT 16" [406mm] OR
24" [610mm] O.C.


ISOMETRIC

WALL FINISH

GENERAL NOTES:

1. CONTRACTOR SHALL
COORDINATE LOCATIONS OF
HORIZONTAL FASTENERS.

PLAN

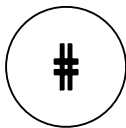

ANCHORAGE - GRAB BARS AND CABINETS

NTS



Department of
Veterans Affairs

DETAIL TITLE / ANCHORAGE - GRAB BARS AND CABINETS

SCALE :NONE

DATE ISSUED: DECEMBER 2008

CAD DETAIL NO.: SD055000-02.DWG