


REFLECTED CEILING PLAN
UNIVERSAL X-RAY ROOM

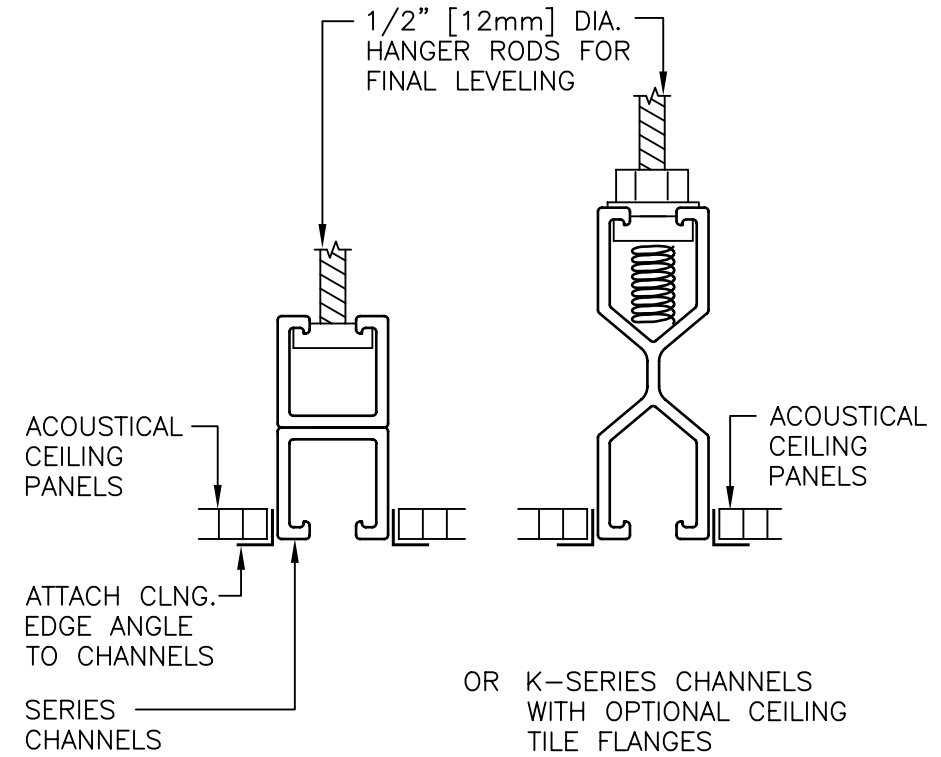

(A) SUPPORT STRUT DETAILS LAY-IN CEILING

GENERAL NOTES:

PROVIDE SUSPENDED GRID OF STRUT CHANNELS TO SUPPORT X-RAY MACHINE RAILS. A/E SHALL DESIGN SUPPORT SYSTEM TO SUIT BUILDING STRUCTURE. SUPPORT RAILS FROM STRUCTURAL BEAMS OR JOISTS (PROVIDE INTERMEDIATE FRAMING AS NECESSARY). DO NOT SUPPORT FROM METAL DECK, CONCRETE SLABS, OR WALK-ON (INTERSTITIAL) DECKS. BRACE SUPPORT SYSTEM FOR LATERAL LOADS FROM MOVING EQUIPMENT AND SEISMIC. PROVIDE LIGHTING AND HVAC PER VA DESIGN MANUALS.

DETAIL TITLE / SUPPORT SYSTEM FOR CEILING
MOUNTED X-RAY EQUIPMENT

SCALE : NONE

DATE ISSUED : DECEMBER 2008

CADD DETAIL NO. : SD134900-04.DWG

